


10502(TG397) - Slack Adjuster Rod Pin Press

Operating Instructions

- 1) Back forcing screw fully out.
- 2) Pull back spring-loaded plunger and slip tool over slack adjuster rod.
- 3) Using (up to) a 3/8" air ratchet, or hand wrench, turn forcing screw until it contacts rod pin.
- 4) Apply the necessary force to move pin. (Tool will shear cotter pin, but remaining pieces may have to be removed by hand.)
- 5) When pin is completely through rod, back out forcing screw and remove tool.

Threads must remain clean and well lubricated at all times.

**Do not use over a 3/8" air ratchet.
Doing so will void warranty.**

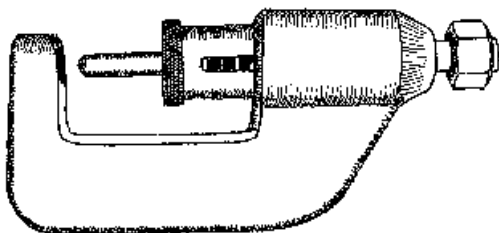

TIGER TOOL
International Incorporated

446 Harison St, P.O. Box 1420, Sumas, WA, 98295, U.S.A.
548 Sumas Way, Abbotsford, BC, V2S 8C4, Canada

Phone: 1-800-661-4661